INSTALLATION INSTRUCTIONS

For Model 72426-212 (Rev. 06/19/2013)

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

PREPARING FOR INSTALLATION (Fig. 2)

1. Shut off the power at the circuit breaker and remove the old fixture, including the mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
3. Pull the black, white and ground wires out of the post.
4. While supporting the lantern connect the electrical wires as shown in Fig. 2. If your outlet box has a ground wire (green or bare copper), connect the fixture ground wire to it. If not, consult your electrician for proper grounding. After the wires are connected, tuck them carefully inside the post.

COMPLETING THE INSTALLATION (Fig 1)

5. Align the lantern with the post and secure with screws (A).
6. Pull up the latch (B) and open the door.
7. Install 3*60W B10.5 bulb(s) (not included) in accordance with the fixture's specifications. **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING). (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!).**
8. When replacing the glass (C), pull up the latch (B) and open the door. Loosen the clips and remove glass (C). After replacing the glass, re-tighten the glass clips, and then close the door.
9. For installing or replacing bulbs at a later date, pull up the latch (B) and open the door. (Fig.1)

Your installation is now complete. Return power to the junction box and test the fixture.

Note: Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

Fig.1

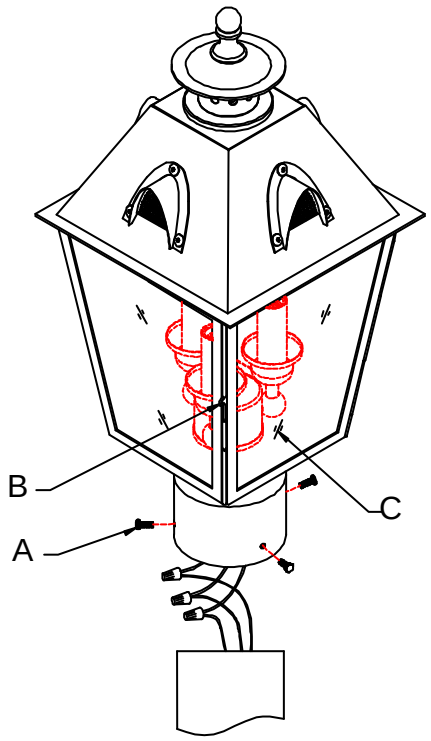

Fig. 2

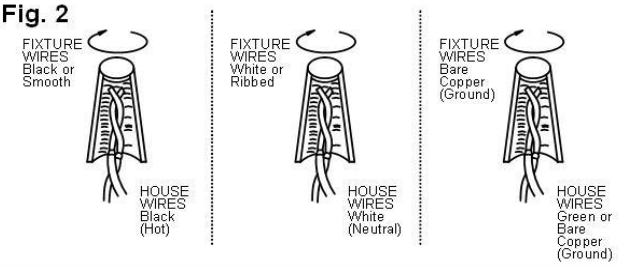
FIXTURE WIRES Black or Smooth
HOUSE WIRES Black (Hot)
FIXTURE WIRES White or Ribbed
HOUSE WIRES White (Neutral)
FIXTURE WIRES Bare Copper (Ground)
HOUSE WIRES Green or Bare Copper (Ground)

Intertek

american lighting association